

MIDI implementation chart of VOYAGER 2

The default control change (CC) numbers are the factory default settings, according to the General MIDI rules. You can change them on the global settings of system panel.

Parameter name	Default CC number	Value
Filter Env Attack	14	0-127
Filter Env Decay	15	0-127
Filter Env Release	16	0-127
Filter Env Sustain	17	0-127
Filter Env Amount	18	0-127 (bipolar)
Filter type	19	0-42: Filter 1 43-84: Filter 2 85-126: Filter3 127: off
Osc 1 Volume	20	0-127
Osc 2 Volume	21	0-127
LFO1 rate	22	0-127
LFO2 rate	23	0-127
Arp mode	24	0-31: off 32-63: on 64-95: hold 96-127: hold+
Arp pattern select	25	0-31: PT1 32-63: PT2 64-95: PT3 96-127: PT4
Solo mode	26	0-63: off 64-127: on
Legato mode	27	0-63: off 64-127: on
Glide	28	0-63: off 64-127: on
Gliding time	29	0-127
Filter resonance	71	0-127
Amp Env Release	72	0-127
Amp Env Attack	73	0-127
Filter cutoff	74	0-127
Amp Env Decay	75	0-127
Amp Env Sustain	76	0-127
Delay FX amount	91	0-127
Reverb FX amount	94	0-127